

M1

**Radio Model**

BC130 , BPR40 , BPR40d , CLS Series , CLS1110 , CLS1410 , CP100 , CP1000 , CP100D , CP110 , CP120 , CP125 , CP150 , CP185 , CP200 , CP200d , CP200XLS , CP88 , CT150 , CT250 , CT450 , CT450LS , DLR1020 , DLR1060 , DP1400 , DTR Series , EP-450 , GP2000 , GP280 , GP300 , GP308 , GP350 (requires Motorola adapter HLN9482) , GP68 , GP88 , GTI , GTX , LTS2000 , MAG ONE , P040 , P080 , P110 , P1215 , P1225LS , PR400 , PRO3150 , R2 , RDM2020 , RDM2080D , RDU Series , RDV Series , RDX Series , RM Series , RMM2050 , RMU2040 , RMU2080D , RMV2080 , SP10 , SP21 , SP50 , VL130 , VL50 , XTN446 , XTN500 , XTN600 , XU1100 , XU2100 , XU2600 , XV1100 , XV2100 , BC400D , BPR50dX

M10

**Radio Model**

MTH650 , MTH800 , MTH850 , MTP850 , Single pin with locking screw for Tetra MTH500 , XTS4000

M11

**Radio Model**

APX1000 , APX3000 , APX4000* , APX6000 , APX6000XE , APX7000 , APX7000XE , APX8000 , APX8000XE , APX900 , DGP4150 , DGP4150+ , DGP6150 , DGP6150+ , DP3400 , DP3401 , DP3600 , DP3601 , DP4400 , DP4600 , DP4800 , MTP6550 , MTP6750 , SRX 2200 , TRBO-XPR4500 , XiRP8200 , XiRP8208 , XiRP8260 , XiRP8268 , XPR6100 , XPR6300 , XPR6350 , XPR6380 , XPR6500 , XPR6550 , XPR6580 , XPR7300 , XPR7350 , XPR7380 , XPR7500 , XPR7550 , XPR7580 , SRX2200 , XPR7350E , XPR7550E , XPR7580E

M15

**Radio Model**

CLPE Series , CURVE , Nitro - SLN1000 , SL300 , SL3500 , SL3500E , SL500 , SL7550 , SL7550E , SL7580 , SL7580E , SL7590 , SL7590E , SLE500 , T-100 , TLK100 , TLK110

M16

**Radio Model**



Motorola CLP Series , CLP1010 , CLP1040 , CLP1060

M17



Radio Model

DP2000 , DP2400 , DP2600 , DP3441 , XPR3300 , XPR3300/3500 Series ,
XPR3300E , XPR3500 , XPR3500E , R5

M19



Radio Model

CLPE Series

M2



Radio Model

GP1280 , GP140 , GP320 , GP328 , GP329 , GP338 , GP339 , GP340 , GP360 ,
GP380 , GP640 , GP650 , GP680 , HT1250 , HT1250LS , HT1550 , HT1550XLS ,
HT750 , MTP700 , MTX4500/4550 , MTX8250 , MTX8250LS , MTX850 , MTX850LS ,
MTX9250 , MTX950 , PR860 , PRO5150 , PRO5350 , PRO5450 , PRO5550 ,
PRO5750 , PRO7150 , PRO7350 , PRO7450 , PRO7550 , PRO7750 , PRO9150 ,
PTX700 , PTX760 , PTX780

M20



Radio Model

R7

M21



Radio Model

CM200 , CM200d , CM300 , CM300d , EM200 , EM400 , GM300 , GM360 , GM3688 ,
M/GM/CM series , M100 , M200 , M400 , XPR 2500

M3



Radio Model

EX500 , EX560XLS , EX600 , GL2000 , GP328Plus , GP338Plus , GP344 , GP388 , PRO5150elite , EX560

M4



Radio Model

SABRE radio series

M5



Radio Model

GP900 , GP9000 , HT1000 , JEDI , JT1000 , MT2000 , MTS2000 , MTX-LS , MTX8000 , MTX838 , MTX900 , MTX9000 , MTX960 , PM1500 , PR1500 , XTS1500 , XTS2500 , XTS3000 , XTS3000Astro , XTS3500 , XTS5000

M6



Radio Model

VISAR radio series

M8



Radio Model

5522 , 5820 , 6200 , 6210 , 6220 , 6250 , 6300 , 6320 , 6400 , FR50 , FR60 , FRS 5512 , T270 , T280 , T289 , T5100 , T5200 , T5300 , T5320 , T5400 , T5410 , T5420 , T5800 , T7200 series

M9



Radio Model

i205 , i215 , i265 , i275 , i285 , i305 , i315 , i325 , i335 , i355 , i365 , i415 , i450 , i465 , i530 , i560 , i570 , i576 , i580 , i605 , i615 , i670 , i710 , i730 , i830 , i860 , ic402 , ic502 , ic602 , ic902 , Nascar Nextel Cup Series Driver Phones , NEXTEL Falcon

Series , Single pin stereo for Nextel , Tetra MTH650/800 , i680 , i720 , i733 , i736 , i740 , i760 , i776 , i833 , i835 , i836 , i850 , i855 , i870 , i875 , i880 , i890 , i920 , i930

KENWOOD

K1



Radio Model

2102/3102(Pro Power) , 2130/3130(Pro Talk XLS) , 2160/3160 , NexEdge NX220 , NX-1202 , NX-1302 , NX-3220 , NX-3320 , NX1200 , NX1300 , NX240 , NX320 , NX340 , NX420 , TH-072A , TH-22AT , TH-235A , TH-28A , TH-42AT , TH-48A , TH-77A , TH-78A , TH-D7A(G) , TH-F6 , TH-F6A , TH-G71A , TH-K2AT , TK-170 , TK-208/308 , TK-2100/3100(Pro Talk) , TK-2170/3170 , TK-220/320 , TK-2200 , TK-2202/2302/4202 , TK-2212/3212/4212 , TK-2300 , TK-2317 , TK-2360 , TK-240/340 , TK-2400 , TK-240D/340D , TK-248/348 , TK-250/350 , TK-260/360 , TK-260G/360G , TK-270/370 , TK-270G/370G , TK-3101(Free Talk XL) , TK-3131(Free Talk XLS) , TK-3173 , TK-3200/3201/3202 , TK-3212 , TK-3230 , TK-3230DX , TK-3317 , TK-3350 , TK-3360 , TK-3400 , TK-353 , TK-372G , TK-373 , TK-430 , TK-431 , TK2312/3312 , TK2400/3400 , TK2402VK/3402UK , TK3230XLS , TK3300 , TK3302 , TK-D240 , TK-D340

K2



Radio Model

NX-200 , NX-210 , NX-300 , NX-3200 , NX-410 , NX-5200 , NX-5300 , NX-5400 , NX3200 , NX3300 , TK-190/290/390 , TK-2140/3140 , TK-2180/3180/4180 , TK-280/380/480 , TK-3148 , TK-3212 , TK-385 , TK-481 , TK-5210 , TK-5220 , TK-5310/5410 , TK-5320/5420 , TK-5400 , TK-5410 , NX-210G

K3



Radio Model

PKT-23 Protalk Radio

K5



Radio Model

NX-P500

K6



Radio Model

NX-700 , NX-720 , NX-800 , NX-820 , NX-900 , NXR-5700 , NXR-5800 , NXR-700 , NXR-800 , NXR-900 , TK-7100 , TK-7102 , TK-7108 , TK-7160 , TK-7162 , TK-7180 , TK-7189 , TK-7302 , TK-7360 , TK-8100 , TK-8102 , TK-8108 , TK-8160 , TK-8180 , TK-8189 , TK-8302 , TK-8360 , TK-D740 , TK-D840 , TKR-751 , TKR-851 , TKR-D710 , TKR-D810 , TM271 , NXR-710 , NXR-810 , TM281

VERTEX

VY1



Radio Model

VX-10 , VX130 , VX160 , VX180 , VX210 , VX210A , VX230 , VX231 , VX300 , VX350 , VX351 , VX354 , VX400 , VX410 , VX420 , VX426 , VX450 , VX454 , VX459 , VX451

VY1A



Radio Model

EVX530/531/534/539(eVerge) , VX-10 , VX130-Mounting Screws , VX160-Mounting Screws , VX180-Mounting Screws , VX210A-Mounting Screws , VX230-Mounting Screws , VX231-Mounting Screws , VX261-Mounting Screws , VX264-Mounting Screws , VX300 , VX350-Mounting Screws , VX351-Mounting Screws , VX354-Mounting Screws , VX400-Mounting Screws , VX410-Mounting Screws , VX417-Mounting Screws , VX420-Mounting Screws , VX426-Mounting Screws , VX427-Mounting Screws , VX450-Mounting Screws , VX451-Mounting Screws , VX454-Mounting Screws , VX459-Mounting Screws , VX210

VY2



Radio Model

MH-360M , MH-450M , MH-50A7A , VH-110 , VH-120 , VH-130 , VH-215M , VH-225M , VH115M , VX600 , VX800 , VX900

VY3



Radio Model

VTX720 , VX820 , VX821 , VX824 , VX829 , VX871 , VX874 , VX879 , VX920 , VX921 , VX924 , VX929 , VX971 , VX974 , VX979 , VXD720 , VDX720

VY4



Radio Model

VX500 , VX510 , VX520

VY5



Radio Model

VX537

VY6



Radio Model

EVX-S24

ICOM

I2



Radio Model

F11 , F11S , F14 , F14S , F15 , F21 , F21S , F22 , F24 , F24S , F3001/F4001 , F3011/F4011 , F3021/F4021 , F3021S/F4021S-Mount Screws , F3021T/F4021T-Mount Screws , F31 , F33/F43 , F3G/F4G , F3GS/F4GS , F43GS , F43GT , F43TR , F3GT/F4GT , BC100

I3



Radio Model

BC100-Mount Screws , F11-Mount Screws , F1100D , F1100DT , F14-Mount Screws , F14S-Mount Screws , F24-Mount Screws , F24S-Mount Screws , F3001/F4001-Mount Screws , F3003/F4003-Mount Screws , F3011/F4011-Mount Screws , F3021/F4021-Mount Screws , F3021S/F4021S-Mount Screws , F3021T/F4021T-Mount Screws , F3041/F4041-Mount Screws , F31-Mount Screws , F3101/F4101-Mount Screws , F3210D , F3230D , F33G/F43G-Mount Screws , F3G/F4G-Mount Screws , F3GS/F4GS-Mount Screws , F4210D , F4230D , F43TR-Mount Screws , V10MR

I5



Radio Model



F30/40 Series , F3061/F4061 Series , F31/41 Series , F3161/F4161 Series ,
F50/60/70/80 Series , F51/61 , M87/88

I6



Radio Model

F3260 , F3261/F4261 , F3261D , F3263 , F3360D , F3400D/4400D , F4261D , F4360
, F4360D , F52D , F5400 , F62D , F6400 , F7010 , F7020 , F7040 , F7210 , F9011 ,
F9021 , SAT-100 , F6400D/DS , F7210T

I7



Radio Model

BC1000 , F1000/2000 Series , F11000 , F2100D , F3031/4031 , F3032S/4032S ,
F3033/4033 , F31W/41W , F3230D/4230D , F4210D , V10MR , V88 , F1100D Series ,
F3031S , F3230DT/DS , F4031S , F4230DT/DS

I8



Radio Model

Aviation A25 , IC-F200 , IC-U20GM , IP100H , IP501H , IP503H

I9



Radio Model

IC-5023H/6023H , IC-F5023/6023 , IC-F5061D/6061D , IC-F5220D/6220D , IC-
F9511/9521 , F5121D/6121D , IC-F5021/6021 , IC-F5011/6011 , IC-F5013/6013 , IC-
5130D/6130D

HYTERA

HYT10



Radio Model

PNC460 , PNC550 , S1 Mini

HYT2



Radio Model

BD502 , HYT2100 , PD402 , PD405 , PD412 , PD415 , PD41X , PD482 , PD500 , PD502 , PD506 , PD508 , PD562 , TC1600-Locking Screw , TC2100-Locking Screw , TC500 , TC508 , TC518 , TC580 , TC600 , TC610 , TC620 , TC700-Locking Screw , Titan-TR2X , Titan-TR400 , Titan-TR4X , BD502i , BD552i , BD612i , PD402i , PD412i , PD482i , PD502i , PD562i

HYT3



Radio Model

PD700 Series , PD702 , PD752 , PD782 , PD792 , PD982i , PD985 , PT580H , PD702i , PD752i , PD782i , PD792i-Ex

HYT4



Radio Model

TC320

HYT5



Radio Model

HP602 , HP682 , HP702 , HP782 , PD600 Series , PD602 , PD602i , PD662 , PD662i , PD682 , PD682i , X1 Series , X1E , X1PI , HP502 , HP562

HYT6



Radio Model

BD3 Series , BD302 , BD352 , HALO , PD3 Series , PD352 , PD362 , X1PI

HYT7



Radio Model

PNC460 , PNC550 , S1 Mini

HYT8



Radio Model

AP512 , AP582 , BP512 , BP562

HYT9



Radio Model

PNC380S , S1 , S1 Pro , PNC360s

M2



Radio Model

TC980

M3



Radio Model

TC-610P , TC-700P , TC-780M , TC-880GM , TC3000 , TC3600 , TC3600M , TC780 , TC780P

M8



Radio Model

PD360 Series , TC1688 , TC310 , Titan-TR200

BENDIX KING

BK1



Radio Model

DPH , GPH Series , LPH

BK2



Radio Model

KNG-P150 , KNG2

K1



Radio Model

RPU416 , RPU416A , RPU4200 , RPU499 , RPU499A Plus , RPV516 , RPV516A ,
RPV599A Plus , RPV599X

M1



Radio Model

RP6500

M3



Radio Model

3300C , RPU3000 , RPU3600 , RPV3000 , RPV3600 , RPV7500 , RPU3300C ,
RPV7200

TAIT

M1



Radio Model



TP2000 Series Radio , TP2210

T1



Radio Model

TP7110 Series , TP8100 Series , TP8110 , TP8115 , TP8120 , TP8135 , TP8140

HARRIS

HYT3



Radio Model

HDP100 , HDP150 , Momentum , HDP250

HYT5



Radio Model

HDP250

MC2



Radio Model

Jaguar 700P , P5100 Series , P5200 Series , P7100 Series , P7200 Series

MC3



Radio Model

P5300 Series , P5350 , P5370 , P5400 Series , P5450 , P5470 , P5500 Series , P5570 , P7300 Series , P7350 , P7370 , P7400 , UNITY XG-75 , XG-15 , XG-25 , XG-75 , XG-15P , XG-25P , XG-75P

MC4



Radio Model

XG-100P , XL-200P , XL-400P , XL-185P

6-PIN QUICK DISCONNECT

M7



Radio Model

EF JOHNSON

K2



Radio Model

VP5230 , VP5330 , VP5430 , VP6230 , VP6330 , VP6430 , VP6000 , VP5000 ,
VP8000

M5



Radio Model

51 Fire ES , 5100 ES Series , 51LT ES , 51SL ES Series , AN/PRC 127EFJ , Avenger
8100 Series , Multi-Net Ascend ES Series , Viking CK8500 Series , Viking Fire , Viking
VP600 , VP900

MAXON/LEGACY

K1



Radio Model

TS-3416K

M1



Radio Model

TJ-3100V , TJ-3400U , TJ3100 , TJ3400 , TP-8000BT Series , TP-8000R Series , TP5116 , TP5416 , TP8000 , TP8102 , TP8402 , TS2116 , TS2416 , TS3116 , TS3416 , TSD4416 , TJ-3400UM

M11



Radio Model

TPD1124 , TPD1424 , TPO-1116 , TPO1416 , TPD-1416

M15



Radio Model

TPD8124 , TPD8424

MA1



Radio Model

PL1145 , PL2215 , PL2245 , PL24125 , PL2445 , SL25 , SL55 , SP100 , SP120 , SP130 , SP140

MIDLAND

K1



Radio Model

BR180 , BR200

M1

Radio Model

MB400

M7



Radio Model

STP404A

MD1



Radio Model

G225 , G227 , G300 , GXT1000 , GXT1050 , GXT1091 , GXT200 , GXT2000 ,
GXT2050 , GXT225 , GXT250 , GXT255 , GXT300 , GXT310 , GXT325 , GXT400 ,
GXT444 , GXT450 , GXT500 , GXT5000 , GXT550 , GXT555 , GXT565 , GXT600 ,
GXT635 , GXT650 , GXT656 , GXT661 , GXT700 , GXT710 , GXT720 , GXT735 ,
GXT740 , GXT745 , GXT750 , GXT756 , GXT757 , GXT760 , GXT771 , GXT775 ,
GXT781 , GXT785 , GXT789 , GXT795 , GXT797 , GXT799 , GXT800 , GXT808 ,
GXT850 , GXT881 , GXT900 , GXT950 , GXT991 , LXT100 , LXT101 , LXT110 ,
LXT112 , LXT114 , LXT118 , LXT210 , LXT216 , LXT276 , LXT300 , LXT303 , LXT305
 , LXT310 , LXT312 , LXT315 , LXT316 , LXT318 , LXT319 , LXT320 , LXT322 ,
LXT323 , LXT324 , LXT326 , LXT328 , LXT330 , LXT335 , LXT340 , LXT345 , LXT350
 , LXT360 , LXT365 , LXT376 , LXT380 , LXT385 , LXT410 , LXT420 , LXT435 ,
LXT440 , LXT460 , LXT480 , LXT490 , LXT500 , LXT535 , LXT560 , LXT600 , LXT80 ,
T31VP , T51VP3 , T55VP3 , T61VP3 , T65VP3 , T71VP3 , T75VP3 , XT14 , XT18 ,
XT20 , XT22 , XT24 , XT25 , XT26 , XT27 , XT28 , XT30 , XT511 , CXT240 , CXT250 ,
CXT280

NEXUS

NX1



Radio Model

TJ-101 , TJ-102 , TJ-120

ROCKY TALKIE

K1



Radio Model

2 Watt Mountain Radio

M3



Radio Model

5 Watt Mountain Radio

SEPURA

SP1



Radio Model

SRH3800 , SRP2000 , SRP3000 , SRH3500

SP2



Radio Model

SRP2000-Locking Screws , SRP3000-Locking Screw , SRH3500-Locking Screw ,
SRH3800-Locking Screw

SP3



Radio Model

SRP2000-Bottom Mount , SRP3000-Bottom Mount , SRH3500-Bottom Mount ,
SRH3800-Bottom Mount

SP4



Radio Model

CC230 , SC20 , STP2000 , STP8000 , STP9000 , STP9100 , STP9200 , SC230
Series

SONIM

ST1



Radio Model
XP5 , XP6 , XP7

TEKK

M1



Radio Model
XU100 , XU1000 , XV100 , XV1000

WOUXUN, LINTON, PUXING, WEIERWEI, FDC

K1



Radio Model
FD-268A/B , FD-278 , FD-289 , FD-6288 , KG-659 , KG-669 , KG-669 PLUS , KG-679 , KG-679 PLUS , KG-689 , KG-689 PLUS , KG-699E , KG-UVD1P , LT-2188/3188/6188 , LT-2268/3268 , LT-2288/3288/5288/6288 , LT-3260 , PX-328 , PX-666 , PX-777 , PX-777 PLUS , PX-888 , PX-888K , PX-999 , V-1000 , VEV-3288S , RT22

SIYATA

M3

Radio Model
SD7

RCA RADIO

HYT2



Radio Model
BR150 , BR200U , BR850 , RDR1520 , RDR2300 , RDR2320 , RDR2325 , RDR2385 , RDR2500 , RDR2550 , RDR2560 , RDR2620 , RDR2650 , RDR2680 , XPR150

M11



Radio Model

P25-Portable , RDR3500 , RDR3600 , RDR4220 , RDR4250 , RDR4280 , RPX4500 , RPX4600

M3




Radio Model

RPX4500 , RPX4600

ZEBRA

Z1

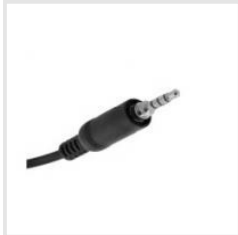

Radio Model

TC20 , TC25 , TC51 , TC52 , TC55 , TC56 , TC57 , TC70 , TC72 , TC75 , TC77 , TC8000 , EC30 , TC71 , TC76

DIGA-TALK

K1



Radio Model

9750 , 9751 , 9850 , DTP9750

M3



Radio Model

DTP9850

KIRISUN RADIO

M1



Radio Model

DP480

M11



Radio Model

DP580 , GP700

R1

Radio Model

T60Y

R2

Radio Model

T60K

BLACK BOX

M1



Radio Model

BlackBox Plus

BEARCOM

I3



Radio Model

BC100

I7



Radio Model

BC1000

K1



Radio Model

BC200 , BC500D

M1



Radio Model

BC300D , BC10 , BC90 , BC95 , BC120 , BC250D