FERRO CONCEPTS

5AC Cobra Buckle Kit
Table of Contents

Product Overview 1
5AC Cobra Buckle Kit Installation 2-9

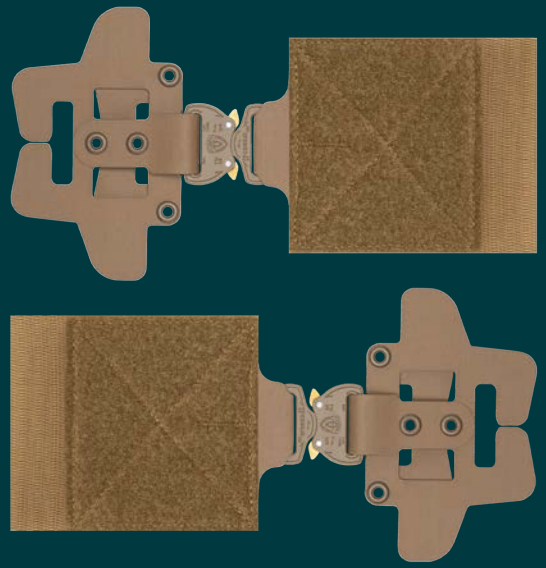

5AC Cobra Buckle Kit

5AC Cobra Buckle Kit | Product Overview

The 5AC Cobra Buckle Kit converts the 5" Assault Cummerbund front Velcro® interface into a rugged, quick-release buckle connection that secures directly to the front plate pockets. This upgrade streamlines your plate carrier for rapid deployment by allowing for easy don/doffing without the need to lift or break your front flap, maintaining a clean, locked-in front profile. Built to preserve full capability and stability, the design still supports MOLLE-compatible pouch mounting directly over the side buckle point without sacrificing usable space. The 5AC Cobra Buckle Kit installs with zero permanent modifications to your existing 5AC and can be completely reverted at any time.

Features:

- Compatible with the 5" Assault Cummerbund only
- Constructed with laser cut thermoplastic
- Does not reflect under IR light/NOD
- No modification required to 5" Assault Cummerbund
- No loss of MOLLE on 5" Assault Cummerbund
- Made in USA

Components:

- 5AC Cobra Buckle Kit

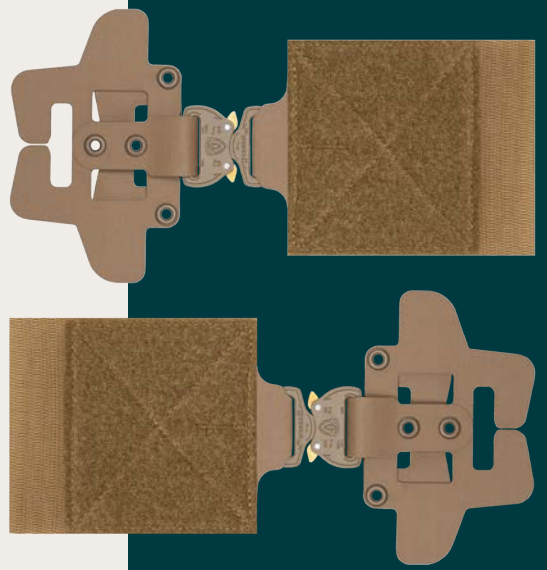

5AC Cobra Buckle Kit (Front)

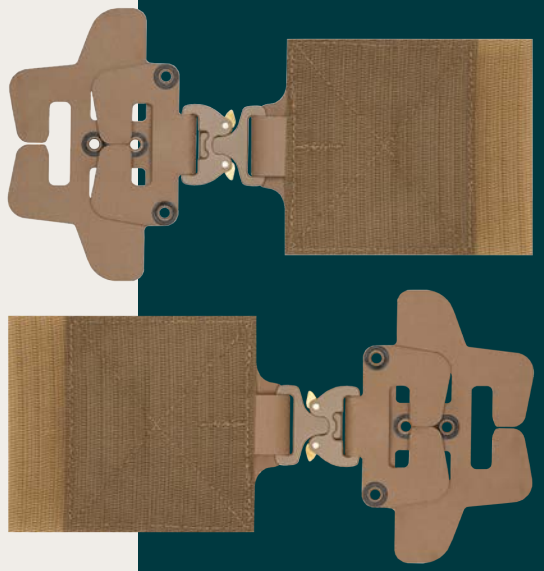

5AC Cobra Buckle Kit (Back)

5AC Cobra Buckle Kit | Installation

Installing the 5AC Cobra Buckle Kit on the 5" Assault Cummerbund

1. Start by disconnecting the male end from the female end of the 5AC Cobra Buckle Kit.

2. There are two tabs on the back of the female end of the 5AC Cobra Buckle Kit, this is your staring point when installing on the 5" Assault Cummerbund.

5AC Cobra Buckle Kit | Installation

Installing the 5AC Cobra Buckle Kit on the 5" Assault Cummerbund

3. On the front of the 5" Assault Cummerbund, insert the top of the back tab into the top laser cut circle.

4. Insert the bottom of the back tab into the bottom laser cut circle.

5AC Cobra Buckle Kit | Installation

Installing the 5AC Cobra Buckle Kit on the 5" Assault Cummerbund

5. Insert the top tab into the top MOLLE webbing column. Gently fold the 5" Assault Cummerbund to assist the tab into the MOLLE webbing column.

6. Insert the bottom tab into the bottom MOLLE webbing column. Gently fold the 5" Assault Cummerbund to assist the tab into the MOLLE webbing column.

5AC Cobra Buckle Kit | Installation

Installing the 5AC Cobra Buckle Kit on the 5" Assault Cummerbund

7. Insert the top of the rear tab into the top laser cut circle.

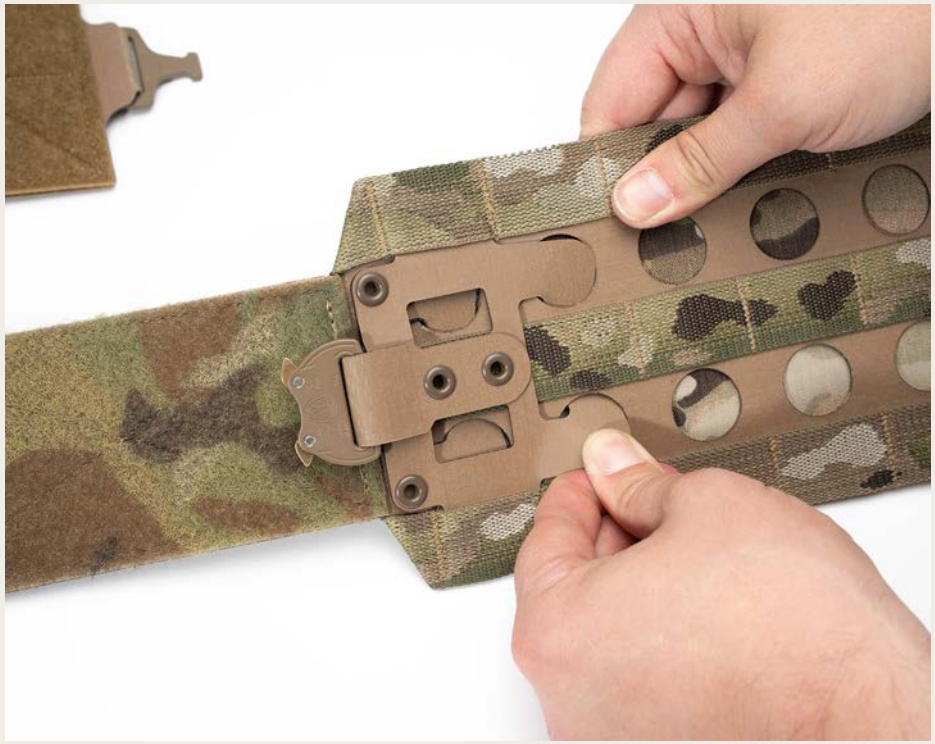

8. Insert the bottom of the rear tab into the bottom laser cut circle.

5AC Cobra Buckle Kit | Installation

Installing the 5AC Cobra Buckle Kit on the 5" Assault Cummerbund

9. Ensure that all tabs are fully seated into the 5" Assault Cummerbund.

10. Fold the front handle section of the 5" Assault Cummerbund inwards and securely fasten the hook Velcro to the loop Velcro on the interior of the cummerbund. Repeat steps 1-10 on the opposite cummerbund.

5AC Cobra Buckle Kit | Installation

Installing the 5AC Cobra Buckle Kit on the 5" Assault Cummerbund

11. Secure the male end of the 5AC Cobra Buckle Kit to the front of the plate carrier. Attach the hook Velcro to the loop Velcro on the front of the carrier.

12. Attach the rear of the 5" Assault Cummerbund to the rear of the plate carrier.

5AC Cobra Buckle Kit | Installation

Installing the 5AC Cobra Buckle Kit on the 5" Assault Cummerbund

13. Re-insert the plate flap into the plate bag. Attach the hook of the plate flap closure to the interior loop on the carrier.

14. Insert the male end into the female end of the 5AC Cobra Buckle Kit.

5AC Cobra Buckle Kit | Installation

Installing the 5AC Cobra Buckle Kit on the 5" Assault Cummerbund

15. Front flaps can be placed over top of the loop on the male end on the 5AC Cobra Buckle Kit.